



Laundry Usage Instructions

IMPORTANT:

The card must be inserted using the proper orientation:

1. Gold rectangle side up.
2. Gold rectangle closest to card slot.

Basic Instructions:

1. Insert your card into the washer or dryer. (Follow the directions above for proper orientation) The machine will display the current balance on the card.
2. Select the appropriate settings for your laundry.
3. Press the start button.

Washing Tips:


- ◆ Do not overload the drum. Washers work best when clothes are loose and below the top holes.
- ◆ Do not mix dark colors with whites as colors may bleed.
- ◆ Select an appropriate temperature for your laundry. Whites and light colors may be washed in Hot water. Dark colors and certain fabrics may require Warm or Cold water.

Drying Tips:

- ◆ **EMPTY LINT TRAP.** Do not overload the dryer. Dryers work best when clothes are loose and able to tumble freely. A good rule of thumb is one wash load per dryer. Do not combine loads of wash together into one dryer.
- ◆ Heavy items such as jeans or towels may require extra drying time.
- ◆ Permanent Press cycle is only for items marked as permanent press on the label.
- ◆ Additional minutes of drying time may be added for \$0.25 by inserting your card once the dryer is running.

**If Washing Machine displays “Machine Fault”,
unplug the power for 5 seconds then plug washer back in.
Please report the error message to Prime Student Housing.**

Please report any problems to Prime Student Housing at:
734-761-8000

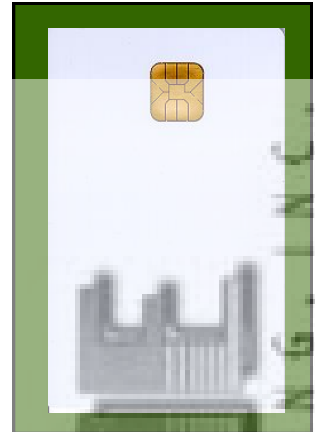

PRIME
STUDENT HOUSING